

c2JpbGV0c2t5aTsyMDIxLTA2LTAyVDEzOjA4OjAzLjI4OVo7MTg1LjIxMC44Ni4yMjITQUxDQTJCTjFKSDc1OTUwOA==

C1BP02H : Junction box-Central

Connector Face

Click to toggle focus

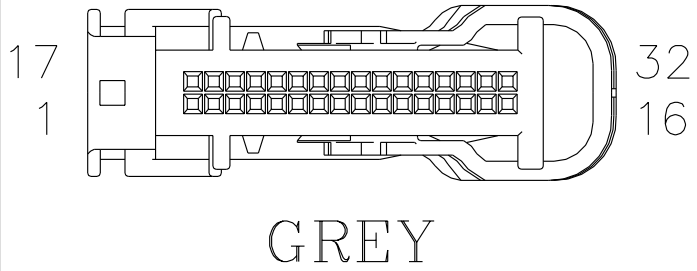

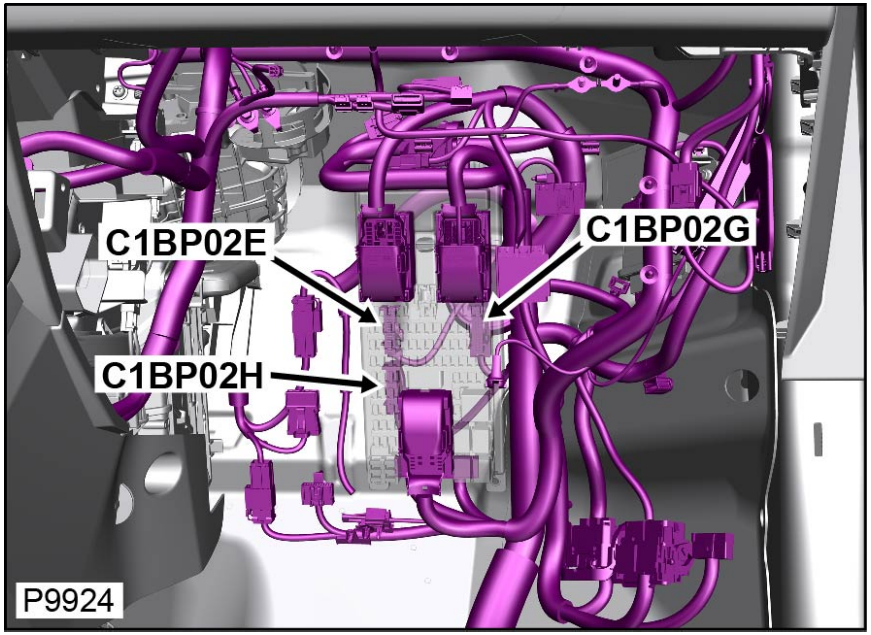

Connector
C1BP02E
C1BP02H
C1BP02G

Housing	**Serviceable** **Overlay not available**
Engineering Part Number	BJ3T-14489-PA
Service Part Number	LR066283
Colour	GREY
Cavities	32
Harness	CABIN LH HARNESS
Description	Junction box-Central
Location	Behind passenger side of Instrument panel
Qualifier	LHD condition illustrated

Wire chart and service repair kit information

CAV	CSA	COL	CCT	DESTN	Pre-Terminated Lead	Extract Tool	Crimpers	Wire Stripper	Heat Shrink Sleeve	Ident Sleeve	Splice
5	0.5	GY-VT	JBBAB/JBBBA	C44YY	418-687	-	418-116A	418-672	418-104	418-113	418-108
8	0.35	BN	ALL	C32C	418-687	-	418-116A	418-672	418-104	418-113	418-108
9	0.35	WH-BN	ALL	C32C	418-687	-	418-116A	418-672	418-104	418-113	418-108

CAV	CSA	COL	CCT	DESTN	Pre-Terminated Lead	Extract Tool	Crimpers	Wire Stripper	Heat Shrink Sleeve	Ident Sleeve	Splice
16	0.5	WH-BU	ALL	C44H	418-687	-	418-116A	418-672	418-104	418-113	418-108
21	0.35	GN-OG	ALL	C32C	418-687	-	418-116A	418-672	418-104	418-113	418-108
29	0.35	VT	BWCAR	C33R	418-687	-	418-116A	418-672	418-104	418-113	418-108
29	0.35	VT	BWCAK	C4R204	418-687	-	418-116A	418-672	418-104	418-113	418-108
30	0.35	WH-OG	BWCAK	C4R205	418-687	-	418-116A	418-672	418-104	418-113	418-108
30	0.35	WH-OG	BWCAR	C33R	418-687	-	418-116A	418-672	418-104	418-113	418-108
31	0.35	GN-OG	BWCAR	C33RA	418-687	-	418-116A	418-672	418-104	418-113	418-108
31	0.35	GN-OG	BWCAK	C4R206	418-687	-	418-116A	418-672	418-104	418-113	418-108